

# INDEX

	Paragraphs	Pages
Air and oil servicing the accessory power supply (APS):		
APS lubrication .....	4-5	4-7
Arm safety check .....	4-6	4-7
General—the missile, how shipped .....	4-1	4-1
Glow plug continuity check .....	4-7	4-7
Hydraulic oil low-temperature limitations .....	4-2	4-1
With winterization kit .....	4-2a	4-1
Without winterization kit .....	4-2b	4-1
Preliminary procedure for APS servicing .....	4-4	4-1
Servicing and test equipment—facilities required .....	4-3	4-1
Air and oil servicing the hydraulic pumping unit (HPU):		
General—the missile, how shipped .....	4-8	4-25
Hydraulic oil low-temperature limitations .....	4-9	4-25
General—specific limits set in table 4-12 .....	4-9a	4-25
Limitations—oil used at various temperatures .....	4-9b	4-26
Preliminary procedures for HPU servicing .....	4-11	4-26
Servicing and test equipment .....	4-10	4-26
Fuel servicing and operational test (hot-run) of the accessory power supply (APS):		
Adjustment of the arm SAFETY SWITCH .....	4-19	4-80
General—time limit on ethylene oxide storage .....	4-17	4-73
Servicing and test equipment .....	4-18	4-73
Missile electrical checkout:		
Check of the HPU squib battery activating circuit .....	4-14	4-64
Check of the missile heater circuits .....	4-13	4-63
Removal of the test equipment .....	4-16	4-72
Test equipment .....	4-12	4-43
Transponder control group air leakage test .....	4-15	4-66
Assembly of the missile for electrical checkout		
Containers, inspection of:		
General .....	3-4	3-8
Rear and forward body section and warhead body section .....	3-5	3-8
General:		
Assembly and service .....	3-2	3-2
General: differences in facilities of permanent- and mobile-type facilities .....	3-2a	3-2
Sequence of assembly and service operations .....	3-2b	3-3
Handling explosives .....	3-3	3-3
Shipment of the missile components .....	3-1	3-1
Uncrating and assembling the missile:		
Access doors, cover plates, and door assemblies, removal of .....	3-8	3-20
Actuator section, inspection of .....	3-9	3-21
Elevons, installation of .....	3-12	3-24
Forward body section, installation for missile electrical checkout (missiles 10206 through 11935) .....	3-13	3-26
Forward body section, installation for missile electrical checkout (missiles 13001 and subsequent) .....	3-14	3-33
Motor start delay timer, removal, test, and installation of .....	3-10	3-22
General .....	3-10a	3-22
Installation .....	3-10d	3-23
Removal .....	3-10b	3-22

	Paragraphs	Pages
Test -----	3-10c	3-22
Rear body section and forward body section -----	3-6	3-8
Container cover, removal of -----	3-6c	3-9
Container depressurization -----	3-6b	3-8
Final uncrating procedures -----	3-6g	3-16
Forward body section, removal of -----	3-6e	3-11
Inspection -----	3-6a	3-8
Preparation of container for shipment -----	3-6h	3-17
Rear body section and forward body section, preparation for removal of -----	3-6d	3-9
Rear body section, removal of -----	3-6f	3-18
Rear main fin, removal and installation of -----	3-11	3-23
Uncrating the main fins and elevons -----	3-7	3-19
Assembly of the rocket motor assembly:		
Assembly of the rocket motor cluster -----	8-6	8-7
General—rocket motor cluster, how shipped -----	8-1	8-1
Rocket motor igniter cable assembly, installation of -----	8-9	8-22
Rocket motor igniter cable assembly test, using multimeter TS-352/U -----	8-8	8-21
Uncrating and inspecting the assembled rocket motor cluster -----	8-7	8-15
Uncrating rocket motor components shipping and storage box XM36 -----	8-4	8-3
Uncrating rocket motor fins shipping and storage box M32 -----	8-2	8-1
Uncrating rocket motor fins shipping and storage box XM39 -----	8-3	8-2
Uncrating rocket motor shipping and storage box -----	8-5	8-5
Corrective maintenance of		
Accessory power supply (APS) and hydraulic pumping unit (HPU):		
Accessory power supply (APS), replacement of -----	12-69	12-59
Installation -----	12-69b	12-61
Removal -----	12-69a	12-59
Hydraulic pumping unit (HPU), replacement of -----	12-70	12-61
Installation -----	12-70b	12-64
Removal -----	12-70a	12-61
HPU squib battery, replacement of -----	12-72	12-67
Installation -----	12-72b	12-68
Removal -----	12-72a	12-67
Replacement of APS 9032190 or 9030900 with the HPU -----	12-73	12-69
Installation -----	12-73b	12-70
Removal -----	12-73a	12-69
Ventilator assembly, replacement of -----	12-71	12-66
Installation -----	12-71b	12-66
Removal -----	12-71a	12-66
Actuator section:		
Actuator section door assemblies, replacement of -----	12-85	12-86
Installation -----	12-85b	12-86
Removal -----	12-85a	12-86
Index pin, replacement of -----	12-86	12-86
Installation -----	12-86b	12-86
Removal -----	12-86a	12-86
Thermal battery assembly, replacement of -----	12-87	12-87
Assembly -----	12-87e	12-90
Disassembly -----	12-87d	12-87
General -----	12-87a	12-87
Inspection and test -----	12-87c	12-87
Installation -----	12-87f	12-90
Removal -----	12-87b	12-87
APS servicing and system cleanup—launching area:		
Air servicing -----	12-74	12-70
Fuel servicing -----	12-77	12-75
Hydraulic oil servicing, using the launching area oil fill valve assembly -----	12-76	12-73
Hydraulic oil servicing, using the portable oil fill and filter unit -----	12-75	12-71

	Paragraphs	Pages
Oil purging -----	12-78	12-76
System cleanup -----	12-79	12-76
Equipment section:		
Battery box cover, replacement of (missiles 10206 through 11935 and 13001 through 13683) -----	12-66	12-57
Installation -----	12-66b	12-57
Rearming the missile -----	12-66c	12-57
Removal -----	12-66a	12-57
Guidance set squib battery, replacement of (missiles 13684 and subsequent) -----	12-68	12-58
Installation -----	12-68b	12-58
Removal -----	12-68a	12-58
Guidance set storage battery and heater assembly (missiles 10206 through 11935 and 13001 through 13683) -----	12-67	12-57
Installation -----	12-67b	12-58
Rearming the missile -----	12-67c	12-58
Removal -----	12-67a	12-58
Forward body section:		
Access door assemblies -----	12-47	12-45
Boltwell covers -----	12-55	12-50
Installation -----	12-55b	12-51
Removal -----	12-55a	12-50
Forward fin assembly, replacement of (missiles 10206 through (11935) -----	12-50	12-46
Installation -----	12-50b	12-47
Removal -----	12-50a	12-46
Forward fin assembly, replacement of (missiles 13001 and subsequent) -----	12-51	12-48
Installation -----	12-51b	12-48
Removal -----	12-51a	12-48
Nose tip, replacement of -----	12-54	12-50
Installation -----	12-54b	12-50
Removal -----	12-54a	12-50
Ram-pressure probe, replacement of (missiles 10206 through 11935) -----	12-48	12-45
Installation -----	12-48b	12-45
Removal -----	12-48a	12-45
Ram-pressure probe, replacement of (missiles 13001 and subsequent) -----	12-49	12-45
Installation -----	12-49b	12-46
Removal -----	12-49a	12-45
Stagnation tube assembly, replacement of (missiles 10206 through 11935) -----	12-52	12-49
Installation -----	12-52b	12-49
Removal -----	12-52a	12-49
Stagnation tube assembly, replacement of (missiles 13001 and subsequent) -----	12-53	12-49
Installation -----	12-53b	12-49
Removal -----	12-53a	12-49
General:		
Exterior surface skin damage -----	12-2	12-6
Safety precautions applicable to corrective maintenance operations in the launching area and the revetted area -----	12-3	12-6
General—summary of precautions -----	12-3a	12-6
Safety precautions applicable to launching area corrective maintenance procedures -----	12-3b	12-6
Scope—summary of chapter contents -----	12-1	12-1
HPU servicing and system cleanup—launching area:		
Air servicing -----	12-80	12-81
Hydraulic oil servicing, using the launching area oil fill valve assembly -----	12-82	12-82
Hydraulic oil servicing, using the portable oil fill and filter unit -----	12-81	12-81
Oil purging -----	12-83	12-83
System cleanup -----	12-84	12-84
Main fins and elevons:		
Elevons, replacement of -----	12-90	12-91

	Paragraphs	Pages
Installation -----	12-90b	12-91
Removal -----	12-90a	12-91
Forward main fins, replacement of -----	12-88	12-90
Installation -----	12-88b	12-90
Removal -----	12-88a	12-90
Rear main fins, replacement of -----	12-89	12-90
Installation -----	12-89b	12-91
Removal -----	12-89a	12-90
Missile guidance set (MUSHROOM):		
Adjustment of the missile response time -----	12-21	12-25
General—summary of section contents -----	12-4	12-7
Handling, cleaning, and inspection -----	12-6	12-9
Cleaning -----	12-6d	12-10
Cleaning metal surfaces -----	12-6d(2)	12-10
Removing loose dirt -----	12-6d(1)	12-10
General—procedures rigidly controlled -----	12-6a	12-9
Handling disassembled parts -----	12-6b	12-9
Hazards of magnesium -----	12-6c	12-10
Corrosion -----	12-6c(2)	12-10
Fire -----	12-6c(1)	12-10
Inspection -----	12-6e	12-10
Cabling -----	12-6e(2)	12-10
Hardware -----	12-6e(1)	12-10
Installation and removal of the nose hinge assembly -----	12-5	12-7
Installation -----	12-5a	12-7
Removal -----	12-5b	12-9
Removal and installation of the rear housing cover -----	12-10	12-11
Installation -----	12-10d	12-13
Removal -----	12-10a	12-11
Replacement of activated desiccant -----	12-10c	12-13
Replacement of preformed packing -----	12-10b	12-13
Replacement of the:		
Antenna horn -----	12-7	12-11
Installation -----	12-7b	12-11
Removal -----	12-7a	12-11
Fail-safe control -----	12-8	12-11
Installation -----	12-8b	12-11
Rearming the missile -----	12-8c	12-11
Removal -----	12-8a	12-11
Flight control group -----	12-16	12-19
Installation -----	12-16b	12-19
Removal -----	12-16a	12-19
Interconnecting board -----	12-17	12-21
Installation -----	12-17b	12-21
Removal -----	12-17a	12-21
Replacement of the:		
Magnetron electron tube -----	12-12	12-14
Installation -----	12-12b	12-14
Removal -----	12-12a	12-14
Missile-code delay line -----	12-11	12-14
Installation -----	12-11b	12-14
Removal -----	12-11a	12-14
Preformed packing from the front housing cover -----	12-15	12-19
Installation -----	12-15b	12-19
Removal -----	12-15a	12-19
Radio set components: -----	12-14	12-18
Amplifier-decoder -----	12-14e	12-19
Installation -----	12-14e(2)	12-19

	Paragraphs	Pages
Removal -----	12-14e(1)	12-19
Plug-in components -----	12-14a	12-18
Installation -----	12-14b(2)	12-18
Removal -----	12-14a(1)	12-18
Radio receiver -----	12-14f	12-19
Installation -----	12-14f(2)	12-19
Removal -----	12-14f(1)	12-19
Radio set power supply -----	12-14d	12-18
Installation -----	12-14d(2)	12-18
Removal -----	12-14d(1)	12-18
Radio transmitter -----	12-14b	12-18
Installation -----	12-14b(2)	12-18
Removal -----	12-14b(1)	12-18
Transistor oscillator inverter -----	12-14c	12-18
Installation -----	12-14c(2)	12-18
Removal -----	12-14c(1)	12-18
Sequential timer -----	12-9	12-11
Installation -----	12-9b	12-11
Rearming the missile -----	12-9c	12-11
Removal -----	12-9a	12-11
Transponder control group -----	12-13	12-14
Installation -----	12-13b	12-16
Removal -----	12-13a	12-14
Waveguide assembly -----	12-18	12-23
Installation -----	12-18b	12-23
Removal -----	12-18a	12-23
Waveguide assembly 9007632 -----	12-20	12-25
Installation -----	12-20b	12-25
Removal -----	12-20a	12-25
Waveguide assemblies 9009051 and 9009558 -----	12-19	12-24
Installation -----	12-19b	12-24
Removal -----	12-19a	12-24
Missile guidance set (STOVEPIPE):		
Adjustment of the missile response time -----	12-46	12-45
Handling, cleaning, and inspection -----	12-23	12-25
Installation and removal of the nose hinge assembly -----	12-22	12-25
Installation -----	12-22a	12-25
Removal -----	12-22b	12-25
Replacement of the:		
Amplifier-decoder -----	12-37	12-40
Installation -----	12-37b	12-40
Removal -----	12-37a	12-40
Antenna horn -----	12-24	12-25
Installation -----	12-24b	12-25
Removal -----	12-24a	12-25
Delay line driver-detector -----	12-36	12-39
Installation -----	12-36b	12-40
Removal -----	12-36a	12-39
Fail-safe control -----	12-25	12-25
Installation -----	12-25b	12-25
Rearming the missile -----	12-25c	12-25
Removal -----	12-25a	12-25
Gyro servo control -----	12-32	12-34
Installation -----	12-32b	12-36
Removal -----	12-32a	12-34
Magnetron electron tube -----	12-38	12-41
Installation -----	12-38b	12-41
Removal -----	12-38a	12-41
Missile-code delay line -----	12-29	12-28

	Paragraphs	Pages
Installation -----	12-29b	12-29
Removal -----	12-29a	12-28
P steering amplifier -----	12-43	12-44
Installation -----	12-43b	12-44
Removal -----	12-43a	12-44
Power supply -----	12-33	12-38
Installation -----	12-33b	12-38
Removal -----	12-33a	12-38
Radar modulator -----	12-34	12-38
Installation -----	12-34b	12-39
Removal -----	12-34a	12-38
Radar modulator thyatron electron tube -----	12-35	12-39
Installation -----	12-35b	12-39
Removal -----	12-35a	12-39
Radio set -----	12-30	12-29
Installation -----	12-30b	12-29
Removal -----	12-30a	12-29
RF detectors 8172668 and 8172699 -----	12-45	12-45
Installation -----	12-45b	12-45
Removal -----	12-45a	12-45
Rear cover gasket -----	12-27	12-26
Installation -----	12-27b	12-26
Removal -----	12-27a	12-26
Rectifying crystal unit -----	12-39	12-42
Installation -----	12-39b	12-42
Removal -----	12-39a	12-42
Roll control amplifier -----	12-41	12-42
Installation -----	12-41b	12-44
Removal -----	12-41a	12-42
Sequential timer -----	12-26	12-26
Installation -----	12-26b	12-26
Removal -----	12-26a	12-26
Signal data converter -----	12-31	12-31
Installation -----	12-31b	12-32
Removal -----	12-31a	12-31
Tapped delay line -----	12-44	12-44
Installation -----	12-44b	12-45
Removal -----	12-44a	12-44
Transponder control group -----	12-28	12-27
Installation -----	12-28b	12-27
Removal -----	12-28a	12-27
Voltage regulator tubes V1, V2, and V3 -----	12-40	12-42
Installation -----	12-40b	12-42
Removal -----	12-40a	12-42
Y steering amplifier -----	12-42	12-44
Installation -----	12-42b	12-44
Removal -----	12-42a	12-44
Missile motor section:		
Replacement of:		
Missile motor section access doors -----	12-61	12-55
Installation -----	12-61b	12-55
Removal -----	12-61a	12-55
Missile rocket motor subassembly -----	12-64	12-56
Installation -----	12-64b	12-56
Removal -----	12-64a	12-56
Motor head heater -----	12-63	12-56
Installation -----	12-63b	12-56
Removal -----	12-63a	12-56

	Paragraphs	Pages
Special shape insulation (missiles 10206 through 11935 and 13001 through 17055) -----	12-62	12-55
Installation -----	12-62b	12-55
Removal -----	12-62a	12-55
Rocket motor cluster:		
General—summary of section contents -----	12-100	12-96
Replacement of:		
Elevon lock -----	12-116	12-102
Installation -----	12-116b	12-102
Removal -----	12-116a	12-102
Fairing wedges -----	12-103	12-97
Installation -----	12-103b	12-97
Removal -----	12-103a	12-97
Filler blocks -----	12-106	12-98
Installation -----	12-106b	12-98
Removal -----	12-106a	12-98
Forward nozzle fairings -----	12-104	12-98
Installation -----	12-104b	12-98
Removal -----	12-104a	12-98
Forward retaining rail bars -----	12-113	12-101
Installation -----	12-113b	12-102
Removal -----	12-113a	12-101
Forward slipper -----	12-114	12-102
Installation -----	12-114b	12-102
Removal -----	12-114a	12-102
Impact cushion -----	12-117	12-103
Installation -----	12-117b	12-103
Removal -----	12-117a	12-103
Lower right or lower left fitting assembly -----	12-111	12-101
Installation -----	12-111b	12-101
Removal -----	12-111a	12-101
Lower rocket motors M5E1 -----	12-110	12-100
Installation -----	12-110b	12-100
Removal -----	12-110a	12-100
Nozzle fairings -----	12-105	12-98
Installation -----	12-105b	12-98
Removal -----	12-105a	12-98
Rear retaining rail bars -----	12-112	12-101
Installation -----	12-112b	12-101
Removal -----	12-112a	12-101
Rocket motor cluster fin assemblies -----	12-102	12-97
Installation -----	12-102b	12-97
Removal -----	12-102a	12-97
Rocket motor igniter cable assembly -----	12-115	12-102
Installation -----	12-115b	12-102
Removal -----	12-115a	12-102
Rocket motor igniters -----	12-101	12-97
Installation -----	12-101b	12-97
Removal -----	12-101a	12-97
Rocket motor thrust assembly -----	12-109	12-100
Installation -----	12-109b	12-100
Removal -----	12-109a	12-100
Upper right or upper left fitting assembly -----	12-107	12-99
Installation -----	12-107b	12-99
Removal -----	12-107a	12-99
Upper rocket motors M5E1 -----	12-108	12-99
Installation -----	12-108b	12-99
Removal -----	12-108a	12-99

	Paragraphs	Pages
Shipping and storage containers:		
General—summary of section contents -----	12-91	12-91
Replacement of:		
Air valve -----	12-92	12-91
Installation -----	12-92b	12-91
Removal -----	12-92a	12-91
Container cover seal -----	12-97	12-94
Installation -----	12-97b	12-94
Removal -----	12-97a	12-94
Forward body section shipping support channel -----	12-98	12-94
Installation -----	12-98b	12-96
Removal -----	12-98a	12-94
Handle on the quick-release clamp -----	12-94	12-91
Installation -----	12-94b	12-92
Removal -----	12-94a	12-92
Inspection panel and gasket -----	12-95	12-92
Installation -----	12-95b	12-92
Removal -----	12-95a	12-92
Relief valve -----	12-93	12-91
Installation -----	12-93b	12-91
Removal -----	12-93a	12-91
Support arm -----	12-99	12-96
Installation -----	12-99b	12-96
Removal -----	12-99a	12-96
Window frame and gasket -----	12-96	12-93
Installation -----	12-96b	12-93
Removal -----	12-96a	12-93
Warhead body section:		
Replacement of:		
Fail-safe control bracket and insulation blanket -----	12-57	12-52
Installation -----	12-57b	12-52
Removal -----	12-57a	12-52
Missile fin bracket -----	12-58	12-53
Installation -----	12-58b	12-53
Removal -----	12-58a	12-53
Safety-and-arming device clip and clip bracket -----	12-59	12-53
Installation -----	12-59b	12-54
Removal -----	12-59a	12-53
Warhead body section access cover plates -----	12-56	12-51
Installation -----	12-56b	12-51
Removal -----	12-56a	12-51
Warhead body section boltwell covers -----	12-60	12-54
Installation -----	12-60b	12-54
Removal -----	12-60a	12-54
Differences among models:		
Actuator section -----	1-11	1-3
Equipment section -----	1-10	1-3
Forward body section -----	1-9	1-3
General -----	1-8	1-3
Final preparation of the missile:		
Adjustment of the missile-away switch -----	10-3	10-9
Inspection and alinement of the ram-pressure probes -----	10-6	10-16
Installing the missile on the launcher -----	10-1	10-1
Propulsion arming lanyard, installation of -----	10-2	10-8
Rocket motor igniters M24A1, M65, or M69, installation of -----	10-4	10-9
Safety-and-arming device M20A1, installation of -----	10-5	10-13
Final preparation of the warhead body section and the forward body section		
Electrical cable connections:		
Fail-safe control and sequential timer, installation of -----	7-3	7-1
Fail-safe wiring harness, installation of -----	7-4	7-3



	Paragraphs	Pages
Transponder control group wiring harness, installation of -----	7-2	7-1
Warhead wiring harness, removal and installation of -----	7-1	7-1
Installation of the forward main fin and the forward body section:		
Forward body section, installation of -----	7-6	7-8
Forward main fins, installation of -----	7-5	7-7
Guidance set squib battery (missiles 13684 and subsequent), installation of -----	7-8	7-14
Guidance set squib battery (missiles 13684 and subsequent), test of -----	7-7	7-13
HPU squib battery (missiles 14965 and subsequent), installation of -----	7-10	7-16
HPU squib battery BA-485/U (missiles 14965 and subsequent), test of -----	7-9	7-15
Electrical tests -----	7-9b	7-15
Visual inspection -----	7-9a	7-15
Installation of the rear roll ring:		
Preparation to lift the missile -----	7-11	7-17
Rear roll ring, installation of -----	7-12	7-17
Forms, records, and reports -----	1-3	1-1
Handling, shipment, and limited storage		
General:		
Class V and general supply items -----	15-4	15-2
Class V items -----	15-4a	15-2
General supply items -----	15-4b	15-2
General precautions -----	15-1	15-1
Handling -----	15-2	15-1
General—summary of precautions -----	15-2a	15-1
Packaged items -----	15-2b	15-1
Unpackaged items -----	15-2c	15-1
Safety -----	15-3	15-1
Limited storage:		
Combination (mixed) storage of explosive components -----	15-13	15-8
Destruction to prevent enemy use -----	15-17	15-11
Explosive components -----	15-10	15-7
Fuel (ethylene oxide—ET <sub>h</sub> O) -----	15-11	15-7
General—rules for storage -----	15-8	15-7
Groups for storage -----	15-9	15-7
Nonexplosive components -----	15-12	15-8
Periodic inspection in storage -----	15-15	15-11
Ethylene oxide (ET <sub>h</sub> O) -----	15-15b	15-11
General—summary -----	15-15a	15-11
Inspection -----	15-15d	15-11
Inspection of pressurized, dehydrated containers -----	15-15c	15-11
Removal from storage, priority of -----	15-15e	15-11
Safeguarding classified items and components -----	15-16	15-11
Shelf or service life -----	15-18	15-12
Special handling instructions for storage -----	15-14	15-8
Explosive components -----	15-14a	15-8
Fuel (ethylene oxide—ET <sub>h</sub> O) -----	15-14b	15-8
Nonexplosive components -----	15-14c	15-11
Shipment:		
Loading guided missiles and components on railroad cars and trucks -----	15-6	15-3
Blocking and staying of freight cars -----	15-6g	15-4
Compatibility -----	15-6f	15-3
General -----	15-6f(1)	15-3
Loading compatibility -----	15-6f(2)	15-3
Markings, labels, and placards -----	15-6b	15-3
Methods of loading -----	15-6c	15-3
Motor truck shipments: regulations and precautions -----	15-6h	15-4
Precautions -----	15-6h(2)	15-6
Regulations -----	15-6h(1)	15-4

	Paragraphs	Pages
Preparation -----	15-6a	15-3
Types of freight cars -----	15-6d	15-3
Types of motor trucks -----	15-6e	15-3
Regulations for transportation and shipment of missiles and missile components -----	15-7	15-5
General—applicability -----	15-7a	15-5
Regulations -----	15-7b	15-5
Bureau of Explosives pamphlet nos. 6 and 6A -----	15-7b(3)	15-7
Civil Aeronautics Authority regulations: Official Air Transport Restricted Articles Tariff No. 6-A -----	15-7b(5)	15-7
Code of Federal Regulations, Title 49—Transportation (Parts 71 to 90) -----	15-7b(2)	15-5
Department of the Army Technical Bulletin 59-1 -----	15-7b(6)	15-7
Interstate Commerce Commission: Motor Carrier Safety Regulations -----	15-7b(1)	15-5
Tariff No. 10 Publishing Interstate Commerce Commission Regulations for Transportation of Explosives and Other Dangerous Articles by Land and Water, in Rail Freight Service and by Motor Vehicle (Highway) and Water: Including Specifications for Shipping Containers -----	15-7b(4)	15-7
Shipment:		
Shipping instructions -----	15-5	15-2
General—responsibility -----	15-5a	15-2
Air pressurization -----	15-5a(5)	15-2
Containers -----	15-5a(4)	15-2
Decontamination or purging -----	15-5a(2)	15-2
Inspection -----	15-5a(1)	15-2
Preservation -----	15-5a(3)	15-2
Recording data -----	15-5a(7)	15-3
Shipping crates -----	15-5a(6)	15-2
Torque requirements:		
General—summary of section comments -----	15-19	15-14
Torque values -----	15-21	15-14
Structural and functional applications -----	15-21a	15-14
Tube fitting locknut applications -----	15-21c	15-16
Tubing applications -----	15-21b	15-16
Torque wrenches -----	15-20	15-14
Missile body, joining procedures for		
Joining the missile body and the rocket motor cluster on the launching- handling rail:		
Transporting the missile body and the rocket motor cluster to the launching area:		
Transporting the missile body, using the missile body truck or the missile body or rocket motor cluster transporter adapter -----	9-1	9-1
Transporting the rocket motor cluster, using the rocket motor cluster truck or the missile body or rocket motor or rocket motor transporter adapter -----	9-2	9-4
Joining the missile body and the rocket motor cluster -----	9-8	9-15
Joining the missile body and the rocket motor cluster on M529 trailer -----	9-6	9-12
Joining the rocket motor cluster to the launching-handling rail on the M529 trailer -----	9-5	9-10
Joining the rocket motor cluster to the launching-handling rail, using rocket motor truck or transporter adapter -----	9-7	9-12
Preparation for joining the missile body and the rocket motor cluster on the launching-handling rail, using an M529 trailer for transporting -----	9-4	9-10
Preparation for joining the missile body and the rocket motor cluster on the launching-handling rail, using a missile body truck or transporter adapter for transporting -----	9-3	9-8
Modification work orders (MWO's) -----	1-6, 1-7	1-1, 1-2

## NIKE-HERCULES guided missile training body section M84

## Assembly procedures:

Final preparation of the missile trainer on the launcher -----	14-25	14-16
Installation of:		
Trainer access doors, cover plates, and door assemblies -----	14-22	14-15
Trainer elevons -----	14-18	14-14
Trainer rear main fins -----	14-17	14-14
Joining the missile body trainer and the rocket motor cluster trainer -----	14-24	14-15
Postmating assembly tests -----	14-26	14-16
Removal of the trainer access doors, cover plates, and door assemblies -----	14-16	14-14
Uncrating and installation of:		
Inert rocket motor subassembly -----	14-19	14-14
Rocket motor cluster trainer -----	14-23	14-15
Training forward body section -----	14-21	14-15
Training warhead section -----	14-20	14-14

## Corrective maintenance:

General—summary of section -----	14-38	14-18
Replacement of:		
Lanyard assembly -----	14-40	14-18
Trainer forward main fin -----	14-41	14-18
Trainer body section index pin -----	14-39	14-18

## Disassembly procedures:

Packaging trainer rear main fins, trainer forward main fins, and trainer elevons for shipment or storage -----	14-37	14-17
Trainer main fin shipping box -----	14-37b	14-18
Trainer main fin shipping crate -----	14-37a	14-18
Preliminary procedures -----	14-27	14-16
Preparation of the trainer body section for shipment or storage -----	14-36	14-16
Rear body section and forward body section container -----	14-36a	14-16
Trainer body section shipping box -----	14-36c	14-17
Trainer body section shipping crate -----	14-36b	14-16
Removal of:		
Inert rocket motor subassembly -----	14-33	14-16
Missile body trainer from the launcher -----	14-28	14-16
Rocket motor cluster trainer from the launcher -----	14-29	14-16
Trainer elevons -----	14-34	14-16
Trainer forward main fins and preparation for removal of the training warhead section -----	14-31	14-16
Trainer rear main fins -----	14-35	14-16
Training forward body section -----	14-30	14-16
Training warhead section -----	14-32	14-16

## General:

Differences among models -----	14-2	14-1
Basic differences -----	14-2b	14-1
General differences -----	14-2a	14-1
Scope -----	14-1	14-1

## Physical description:

General—overall summarized description -----	14-3	14-1
Trainer actuator section -----	14-6	14-2
Trainer body section external markings -----	14-8	14-3
Trainer equipment section -----	14-5	14-2
Trainer main fin -----	14-7	14-2
Trainer motor section -----	14-4	14-1

## Shipment, inspection, and uncrating:

Container, inspection of -----	14-10	14-8
Rear body section and forward body section container -----	14-10c	14-8
Trainer body section shipping box -----	14-10b	14-8
Trainer body section shipping crate -----	14-10a	14-8
Trainer main fin shipping box -----	14-10e	14-8

	Paragraphs	Pages
Trainer main fin shipping crate .....	14-10d	14-8
Removal of:		
Trainer body section from the trainer body section shipping box .....	14-12	14-18
Trainer body section from the trainer body section shipping crate .....	14-11	14-8
Trainer body section from the rear body section and forward body section container .....	14-14	14-18
Trainer rear main fins, trainer forward main fins, and trainer elevons from the trainer main fin shipping box .....	14-15	14-14
Trainer rear main fins, trainer forward main fins, and the trainer elevons from the trainer main fin shipping crate .....	14-13	14-18
Shipment of training body section M84 components .....	14-9	14-8
General—how normally shipped .....	14-9a	14-8
Trainer body section container .....	14-9b	14-8
Normal deactivation procedures		
Defueling, depressurizing, and purging the accessory power supply (APS):		
APS defueling .....	11-29	11-16
APS and HPU depressurizing .....	11-30	11-18
APS purging .....	11-31	11-18
General—when required .....	11-27	11-16
Servicing and test equipment .....	11-28	11-16
General:		
Deactivation sequence .....	11-2	11-1
Handling explosives .....	11-8	11-1
Introduction—summary of chapter contents .....	11-1	11-1
Preliminary procedures:		
Disarming the missile .....	11-4	11-1
Guidance set storage battery, removal of (missiles 10206 through 11935 and 13001 through 13683) .....	11-5	11-8
HPU squib battery, removal of .....	11-7	11-4
Squib batteries, removal of (missiles 13684 and subsequent) .....	11-6	11-4
Preparation of the forward and rear body sections for shipment or storage:		
Forward body section, preparation of, for shipment .....	11-37	11-22
Rear body section, preparation of, for shipment .....	11-36	11-21
Shipping container .....	11-35	11-21
Removal of the forward body section:		
Forward body section, preparation for removal of .....	11-14	11-9
Forward body section, removal of .....	11-15	11-9
Removal of the forward main fins and preparation for removal of the warhead body section:		
Fail-safe wiring harness, removal of .....	11-17	11-10
Forward main fins, removal of .....	11-16	11-10
Transponder control group wiring harness, removal of .....	11-18	11-11
Warhead wiring harness, removal of .....	11-19	11-11
Removal of the missile body from the launching-handling rail:		
Missile body, removal of .....	11-10	11-6
Transporting the missile body to the surface area .....	11-11	11-7
Removal of the missile from the launching area, using guided missile low-bed trailer M529:		
General—disposition of explosive components for transportation .....	11-8	11-5
Removal of the missile from the launcher .....	11-9	11-5
Removal of the missile rocket motor subassembly:		
Crating the missile rocket motor subassembly .....	11-25	11-15
Missile rocket motor subassembly, removal of .....	11-24	11-14
Preparation for removal of the missile rocket motor subassembly .....	11-23	11-13
Rear body section, final preparation of, for storage or shipment .....	11-26	11-15
Removal of the rocket motor cluster from the launching-handling rail:		
Rocket motor cluster, removal of .....	11-12	11-8
Transporting the rocket motor cluster to the service area .....	11-13	11-8
Rocket motor cluster, transporting on the rocket motor cluster truck .....	11-23a	11-8
Rocket motor cluster, transporting on the transporter adapter mounted on the transporter trailer .....	11-13b	11-8

	Paragraphs	Pages
Removal of the warhead body section:		
Boltwell covers, removal of -----	11-20	11-12
Preparation for shipment or storage -----	11-22	11-12
Warhead body section, removal of -----	11-21	11-12
Removing and packaging the main fins and the elevons:		
Elevons, removal of -----	11-32	11-20
Main fins and elevons, packaging -----	11-34	11-20
Rear main fin, removal of -----	11-33	11-20
Organizational maintenance allocation -----	1-2	1-1
Parts, common tools, and equipment:		
Common tools and equipment -----	2-3	2-1
General -----	2-1	2-1
Repair parts -----	2-2	2-1
References -----	1-5	1-1
Reporting equipment publication improvements -----	1-4	1-1
Scope of manual -----	1-1	1-1
Special tools and equipment and fabricated tools:		
Fabricated tools -----	2-6	2-3
General -----	2-4	2-1
Special tools and equipment -----	2-5	2-1
Tables:		
Alignment of the HERCULES missile RF test set group (table 4-10) -----		4-44
Combination (mixed) storage of explosive components (table 15-5) -----		15-9
Contents of guided missile MIM-14A and MIM-14B shipping and storage containers (table 3-1) -----		3-1
Continuity test of the launching-handling rail cables (table 9-1) -----		9-8
Continuity test of the rocket motor igniter cable assembly (table 8-1) -----		8-22
Deactivation procedures that must be performed before corrective maintenance operations (table 12-1) -----		12-1
Established shelf or service life data (table 15-8) -----		15-12
Explosive weight, quantity-distance classes, and storage compatibility for class V items (table 15-1) -----		15-2
Fuel servicing and operational test (HOT-RUN) of the accessory power supply (APS) (table 4-13) -----		4-74
Hydraulic oil change and buzz voltage requirements (table 4-12) -----		4-62
Hydraulic oil fill and system bleed of the accessory power supply, using hydraulic test stand M14 (table 4-3) -----		4-13
Hydraulic oil fill and system cleanup of the accessory power supply, using the portable oil fill and filter unit (table 4-2) -----		4-9
Hydraulic oil fill and system bleed of the hydraulic pumping unit, using hydraulic test stand M14 (table 4-6) -----		4-39
Hydraulic oil fill and system cleanup of the hydraulic pumping unit, using the portable oil fill and filter unit (table 4-5) -----		4-34
Initial air fill of the accessory power supply (APS) (table 4-1) -----		4-8
Initial air fill of the hydraulic pumping unit (HPU) (table 4-4) -----		4-33
Loading compatibility for hazardous missile components for rail and motor truck shipment (table 15-3) -----		15-4
Markings, labels, and placards for rail and truck shipment of explosive and flammable missile components (table 15-2) -----		15-3
Missile body external markings (table 3-2) -----		3-38
Missile body torque values (table 15-9) -----		15-15
Missile electrical checks (table 4-11) -----		4-48
Operating cycles for the transponder control groups, using the cooling unit in a white missile during ground operating procedures (table 4-8) -----		4-43
Operating cycles for the transponder control groups, without the coding unit, during ground operating procedures (table 4-7) -----		4-42
Package data (table 15-4) -----		15-6
Rocket motor cluster torque values (table 15-10) -----		15-15
Rocket motor M5E1 or cluster M42—safe firing temperature (table 13-1) -----		13-2

	Paragraphs	Pages
Running periods for the transponder control groups, using the cooling unit in a camouflage-painted missile exposed to solar radiation (table 4-9) -----		4-43
Special handling instructions for explosive components (table 15-6) -----		15-10
Special handling instructions for nonexplosive components (table 15-7) -----		15-10
Special tools and equipment (table 2-1) -----		2-2
Torque values for coupling nuts used with aluminum alloy tubing (table 15-12) -----		15-16
Torque values for coupling nuts used with steel tubing (table 15-13) -----		15-16
Torque values for locknuts used with gasket type tube fittings, unions, and elbows (table 15-14) -----		15-16
Trainer body section external markings (table 14-1) -----		14-4
Winterization kit torque values (table 15-11) -----		15-16
Uncrating and installing the missile rocket motor assembly		
Installation of the missile rocket motor assembly:		
Final assembly -----	5-10	5-14
Installation -----	5-9	5-12
Preliminary Procedures:		
Access doors and door assemblies, removal of -----	5-4	5-2
Blast tube shipping support, removal of -----	5-6	5-2
Forward body section, removal of -----	5-1	5-1
Rear roll ring, removal of -----	5-3	5-2
Testing fixture, removal of -----	5-2	5-1
Wiring harness, removal of -----	5-5	5-2
Uncrating the missile rocket motor subassembly:		
Shipping container, removal from -----	5-7	5-6
Shipping rings, removal of -----	5-8	5-7
Uncrating and installing the warhead body section:		
Installing the warhead body section -----	6-3	6-4
Preliminary procedures -----	6-1	6-1
Uncrating the warhead body section -----	6-2	6-1
Winterization instructions		
APS and battery box winterization kit:		
APS winterization kit, installation of -----	13-21	13-22
Missile battery box blanket, installation of -----	13-22	13-23
APS winterization kit, removal of -----	13-23	13-24
Missile battery box blanket, removal of -----	13-24	13-25
Corrective maintenance of winterization kits:		
Repair of punctured rocket motor cluster heating blankets -----	13-26	13-27
Indicating thermometer, replacement of -----	13-27	13-27
Installation -----	13-27b	13-28
Removal -----	13-27a	13-27
Rocket motor cluster heating blankets, replacement of -----	13-25	13-26
Installation -----	13-25b	13-26
Removal -----	13-25a	13-26
General:		
APS and HPU low-temperature operation limitations -----	13-4	13-3
Functional description -----	13-3	13-1
APS winterization kit -----	13-3b	13-1
Rocket motor cluster winterization kit -----	13-3a	13-1
Introduction -----	13-1	13-1
Purpose -----	13-1b	13-1
Scope -----	13-1a	13-1
Physical description -----	13-2	13-1
APS winterization kit -----	13-2b	13-1
Rocket motor cluster winterization kit -----	13-2a	13-1
Rocket motor cluster winterization kit:		
Inspection of the shipping and storage box -----	13-6	13-6

	Paragraphs	Pages
Installation of:		
Cover plate -----	13-8	13-7
Forward insulation blanket -----	13-10	13-11
Heater cable shearing clamp -----	13-17	13-19
Heating blankets -----	13-12	13-13
Honeycomb fairings -----	13-13	13-18
Rear insulation blanket -----	13-11	13-12
Side fairing -----	13-15	13-18
Spring tension clips -----	13-9	13-7
Top and bottom fairings -----	13-14	13-18
Joining procedures and final installation -----	13-16	13-18
Packaging the rocket cluster winterization kit -----	13-20	13-22
Preparation for installing the rocket motor cluster winterization kit -----	13-5	13-6
Preparation for removal of the rocket motor cluster winterization kit -----	13-18	13-19
Removal of the rocket motor cluster winterization kit -----	13-19	13-20
Uncrating the rocket motor cluster winterization kit -----	13-7	13-6